
SmartTouch PRO Controller Technical Data



PRODUCT IMAGE

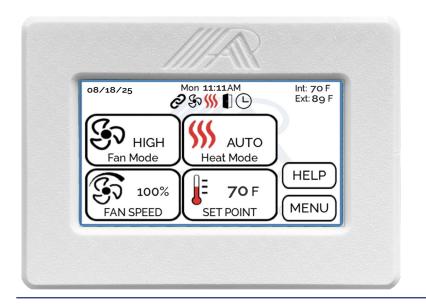

FEATURES AND KEY PRODUCT INFORMATION

- ➤ Web server connectivity, the SmartTouch Pro integrates seamlessly with a building's WiFi network, allowing remote access and control of the air curtain from any device connected to the server
- ➤ Complete Air Curtain control including fan speed, temperature, fan mode, heat and other functionality
- ► Capable of BACnet control and monitoring
- ➤ Temperature sensor for pinpoint readings that maximize air curtain effectiveness and active supplemental heat when programmed
- ► Lockable screen to unwanted adjustments/tampering
- ▶ Unit mounting in slim, low profile case
- ► Remote mounting connection via a standard Cat5 Ethernet cable or WiFi Network Integration
- ▶ Back-lit LCD illuminates upon touch for easy/instant visibility regardless of ambient lighting

ALTERNATE VIEWS



REMOTELY CONTROL AIR CURTAINS





APPLICATION NOTES

- CR2032 3V Lithium battery stores time settings in event of power failure
- Mirrored interface enables real-time adjustments to air curtain's operational functionality via computer, tablet, or smartphone-just as they would on physical controller.
- All screens (except home screen) feature back button to return to previous screen
- Remote mounting in standard, single gang electrical box
- Preset at factory to pair with air curtain and application requirements
- Screen indicators provide real-time operational status
- Screen can be set to display in English, Spanish or French




QUESTIONS & TECHNICAL SUPPORT AVAILABLE. CONTACT US DIRECTLY:

SmartTouch PRO Controller **Technical Data**



SCREEN LAYOUT

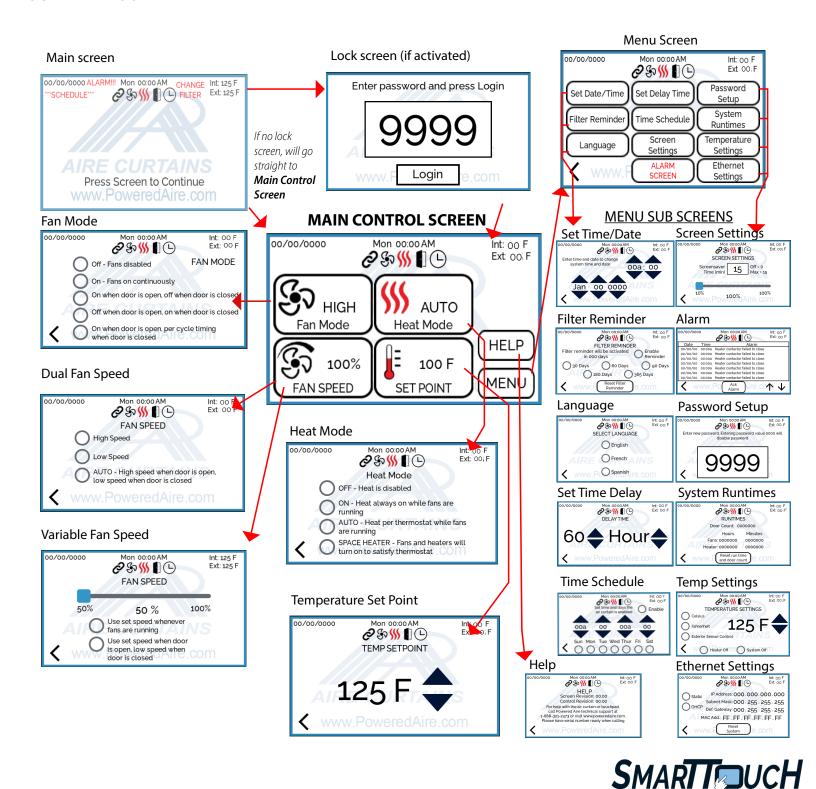


QUESTIONS & TECHNICAL SUPPORT AVAILABLE. CONTACT US DIRECTLY:


SmartTouch PRO Controller Technical Data



PRODUCT DRAWINGS

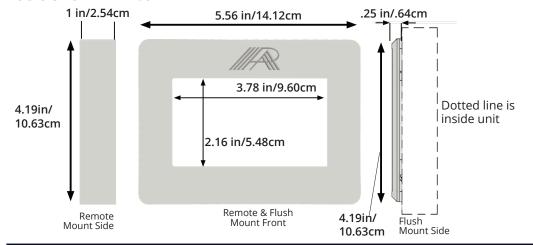

WIFI CONTROL SCREEN VIEW ON LAPTOP/TABLET MOBILE DEVICE

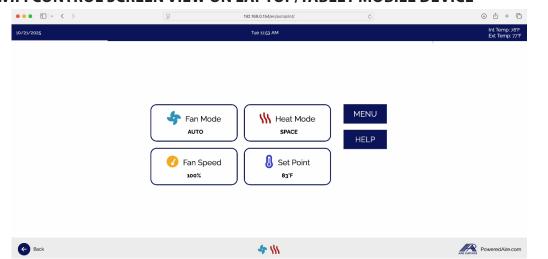

Building Automation and Control Networks (BACnet)

There are 57 SmartTouch settings that can be controlled via BACnet ranging from SmartTouch setup to air curtain functionality (fan control, heat, temperature control) to key reminders (alarms, reminders and door counts). A complete list of these controls is available at **www.PoweredAire.com/ST.**

BACnet Alarms			
Alarm Code (Decimal)	Message	Description	
161	Motor contactor failure	Motor commanded on, no aux contact closure from contactor	
162	Motor overload failure	Motor overload has tripped	
163	Heat contactor failure	Heater commanded on, no aux contact closure from contactor	
164	Heat overtemp failure	Overtemp switch has been activated	
165	Flow switch 1 failure	Motor is commanded on, contactor is closed, no flow switch indication	
166	Flow switch 2 failure	Motor is commanded on, contactor is closed, no flow switch indication	

Touchpad Performance

Hardware			
СРИ	32-bit RISC CPU		
Real Time Clock (RTC)	Yes		
Communication Interface			
CN1	24VDC/CANbus to control board		
CN2	Ethernet - BACnet IP, HTML Server (port 80)		
WiFi Connection	Connect to router then use unit IP to access server		
MMI (Man Machine Interface)			
LCD	4.3" (480W x 272H), 16.7M colors		
Backlight Life	>30,000 hours		
Brightness	650 nits		
Touch Panel	Capacitive Touch		
Electrical			
Power Input	24VDC (through RJ-45 port)		
Power Consumption	2.5W @ 5VDC		
Battery	CR2032 3V Lithium		
Mechanical			
Dimensions (W x L x H)"	See drawings		
Installation	Wall Mount or Air Curtain Mount		
Ingress Protection	IP40		
Environmental			
Operating Temperature	"-20°C~-+70°C (-4°F~-+158°F)"		
Storage Temperature	"-30°C~-+85°C (-22°F~-+185°F)"		
Ambient Relative Humidity	Temp < 60C 90%RH Max (96HRS Max) Temp > 60C Absolute humidity must be lower than humidity of 90%RH (96 HRS Max)		




QUESTIONS & TECHNICAL SUPPORT AVAILABLE. CONTACT US DIRECTLY:

SmartTouch PRO Controller Technical Data




WIFI/SERVER SETUP INSTRUCTIONS


Step1: Press the "MENU" button

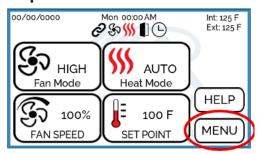

Step 2: Press the "Ethernet Settings" button

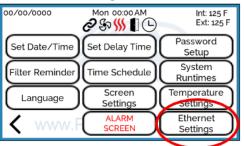

Step 3: Select the "Static" option:

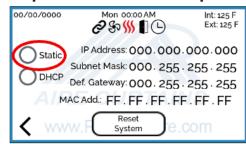

Step 4: Assign Values (We recommend getting assistance from your IT team)

With the assistance of a network administrator, assign permanent values to the following on both the Smart Touch Pro and Router:

- ► IP Address
- Subnet Mask
- Default Gateway
- MAC Address Will not be necessary for web server setup

Ensure that all values are set as static within the router to prevent conflicts with other devices on the network.

Ensure values set on Smart Touch Pro match settings on Router or this will NOT work

00/00/0000 Mon 00:00 AM Int: 125 F
Ext: 125 F

Static Subnet Mask: 000 . 0255 . 255 . 255

DHCP Def. Gateway: 000 . 255 . 255 . 255

MAC Add.: FF . FF . FF . FF . FF

Reset System

O Int: 125 F
Ext: 125 F
Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F

Ext: 125 F


Ext: 125 F

Ext: 125 F

Ext:

Step 5: Once values are assigned on both the router and Smart Touch Pro, press the "Reset System" button at the bottom of the touch screen. This will apply all modifications and automatically restart the Smart Touch Pro.

Step 6. Once restarted, return to the "Ethernet Settings" menu to confirm that all changes have been saved correctly. If not, repeat steps 4 and 5.

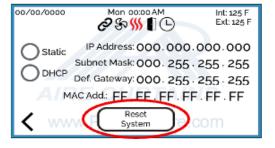


Step 7: To test connectivity to the Web server, ensure that you are using a computer on the same network. Open any web browser, enter the IP address that was assigned to the Smart Touch Pro, and press enter

At this point, the web server can be used exactly like the touch screen. Any changes made to the web server will be applied to the Smart Touch Pro in real time. As long as the Smart Touch Pro is on the same network, it can be controlled wirelessly from a cell phone, tablet, or laptop.

To set up functionality for BACnet - This is heavily dependent on the building management system (BMS) being used. The Smart Touch Pro is a BACnet over IP/Ethernet device and will need to be set up as such.

The BACnet IP Port will be 47808. Once set up, it will allow the Smart Touch Pro to be controlled through a BMS/BAS.

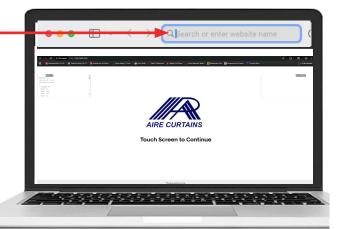

QUESTIONS & TECHNICAL SUPPORT AVAILABLE. CONTACT US DIRECTLY:

Phone Support 1-888-321-Aire (2473) Email Support & Service
CustomerService@PoweredAire.com

Sales Questions
Sales@PoweredAire.com